



How to start the Generator

- 1, Check that the 230V isolator (1) is off (down) **BEFORE STARTING ENGINE.**
- 2, Turn the starter key (2) to the 'on' position and wait for the whirring noise to stop.
- 3, Turn the starter key (2) to the 'start' position and hold until the engine catches.
- 4, Check that the red oil light (3) has gone out.
- 5, If the green light (4) does not come on, briefly press red button (5); the green light should come on and the voltmeter needle should jump to around 230V.
- 6, Turn the 230V isolator (1) to the 'on' position (up).
- 7, Check that the container extract fan starts automatically. Do not run generator without extract fan on, or container doors open.

How to stop the Generator

- 7, Switch the 230V isolator (1) to the 'off' position (down) **BEFORE STOPPING THE ENGINE**
- 8, Turn the starter key (2) to the 'off' position.